


LAMONA

at the heart of the kitchen

LAM2709
LAM2710

60cm / 90cm Black Angled Cooker Hood

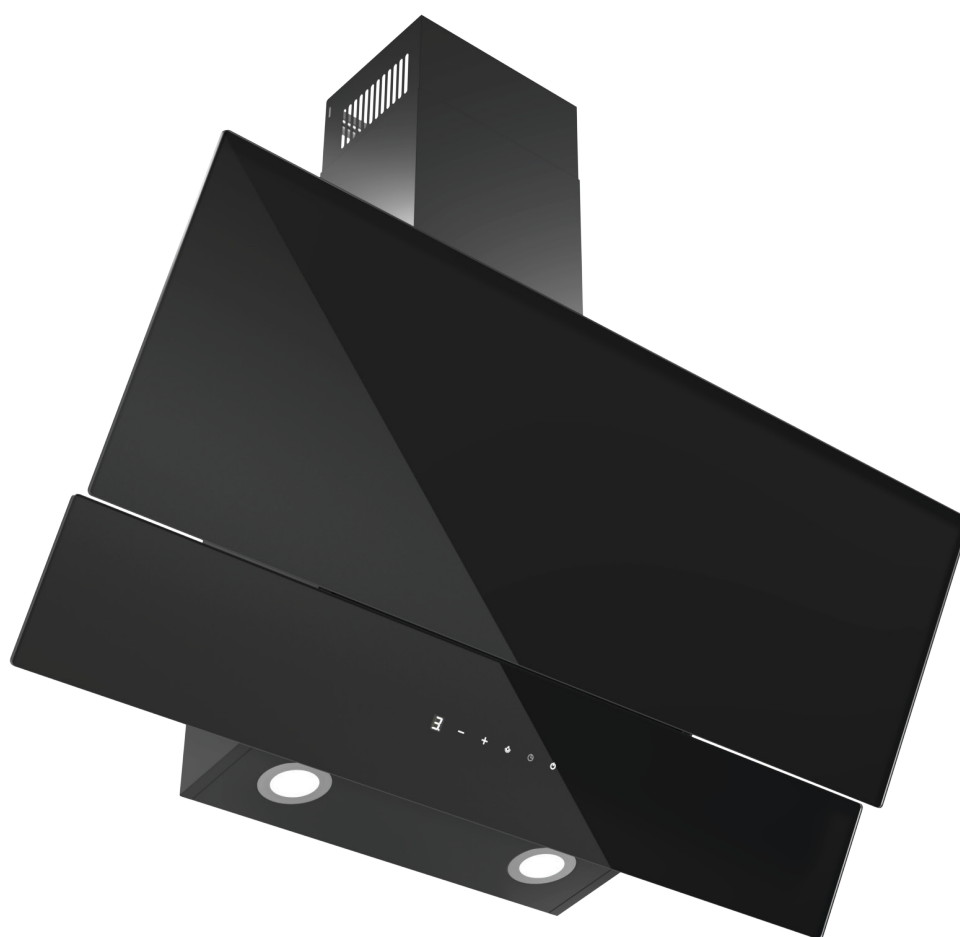

- Please read the Installation instructions to ensure safe fitting and use of the appliance.
- The appliance should be fitted by a suitably competent and qualified person.
- Please keep these instructions in a safe place for future reference.
- Danger of suffocation, keep packaging material away from children.

User Instructions

ISSUE v1.0 080424

Register
my appliance

www.howdens.com/appliance-registration



Free 3 year guarantee

Call now¹

Within the UK:

0333 010 0009

Within Republic of Ireland:

01525 5752

Alternatively, visit www.howdens.com/appliance-registration

LAMONA

**3 year guarantee available.
Register your appliance within 90 days²**

By registering your appliance and creating an account, we will keep you up to date with the latest product information and notify you immediately of any important product updates

¹Lines are open Monday to Friday 9am to 5pm. Calls will be charged at your local rate and may be recorded and monitored for training and quality purposes.

²So that in the event of an important product update, or recall, we can contact you.

Register 
my appliance

Welcome

Dear Customer,

Congratulations on your choice of LAMONA cooker hood.

- Please read these instructions carefully before use to ensure safe and economical operation of the appliance.
- Please keep these instructions in a safe place for your future reference and for future owners.
- If you have any questions, or if you are not sure about any information contained within this booklet, please contact us - details at the end of the booklet.

This appliance is intended to be used in household and similar domestic applications, see guarantee page for definition of domestic use.

The **CE** and **UKCA** marks on this product, confirm compliance to all relevant UK and European safety, health and environmental requirements which are applicable in legislation for this product.

The following symbols are used throughout this manual:



Warning for electric shock.



Warning for hazardous situations with regard to life and property.



Warning for hot surfaces.



Important / note for operating the system correctly.




WARNING: Risk of fire!

Main features

Latest in extraction technology

- 3 speed settings
- High Speed mode for fast extraction
- Built-in LED illumination

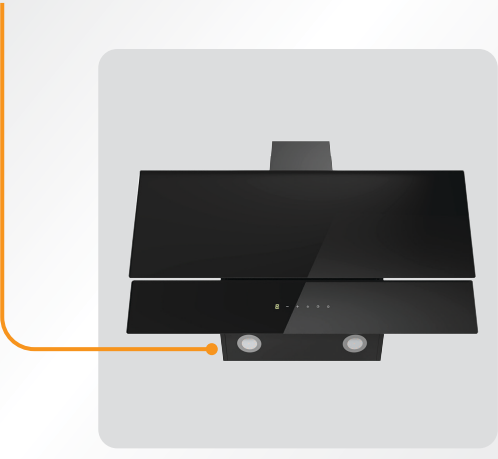

Contents

Warning and safety information.....	p.4	Removing, cleaning & installing the grease filter	p.11
Correct application.....	p.4	Replacing the carbon filters.....	p.12
Safety for children and vulnerable people	p.5	Replacing lamps	p.12
General safety	p.5	Trouble shooting.....	p.13
Safety when working with electricity	p.5	Technical specifications.....	p.14
Electrical connection	p.5	Service and repairs	p.15
Danger of toxic fumes	p.6	Caring for the environment	p.15
LAM2709/10 ...Black Angled Cooker Hood	p.7	Reducing energy use during cooking.....	p.15
Overview	p.7	Disposal of the packaging material	p.15
LED Touch Control.....	p.7	Disposing of your old appliance.....	p.15
Before using for the first time	p.8	Guarantee	p.16
Metal surfaces and condensation.....	p.8	Serial number	p.16
Operating your cooker hood.....	p.8		
Built-In LED lighting.....	p.9		
Setting extraction speed	p.9		
Timer Function.....	p.10		
Care and maintenance	p.10		
Cleaning method.....	p.10		
General cleaning	p.10		

Warning and Safety Information



● Please read these instructions carefully. The manufacturer is not responsible if an incorrect installation and use causes injuries and/or damage. Always keep these instructions with the appliance for future reference.

Please take appropriate care when installing, maintaining, cleaning and operating this appliance.

Correct application

- This appliance is intended for domestic extraction only. It must not be used for other purposes. Commercial and any other use will be considered improper and will void the guarantee.
- The manufacturer shall not be liable for any damage caused by improper use, installation or handling errors. Repairs must only be carried out by authorised service agents, otherwise the guarantee may become void.
- The appliance may be used by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it safely and recognise and understand the consequences of incorrect operation.
- Never use the product when your judgement or coordination is impaired by the use of alcohol and / or drugs.



Safety for children and vulnerable people

- This product is not intended to be used by persons with physical, sensory or mental disorders or unlearned or inexperienced people (including children), unless they are supervised by a person who will be responsible for their safety or who will instruct them accordingly in the use of the product.
- Electrical appliances can be dangerous to children. Keep children away when it is operating.
- Please supervise children in the vicinity of the appliance and do not let them play with it.
- Packaging materials may be dangerous for children. Keep packaging away from children. Dispose of all packaging according to environmental standards.
- Cleaning/maintenance can be carried out by children 8 years of older, but must be supervised.



General safety

- DO NOT use if the appliance and/or power cable is damaged. It must be replaced by the manufacturer or a qualified service agent.
- Do not use without grease filter(s) installed; or if the installed filter(s) is excessively greasy.
- Do not carry out any repairs or modifications on the product. However, you may remedy some problems that do not require any repairs or modifications. See page 11 "Trouble shooting".
- Never wash down the product with excessive water, as there is the risk of electric shock.
- Do not use a steam cleaner to clean this appliance.
- The appliance must be disconnected from the mains during installation, maintenance (e.g. changing a the light bulbs); cleaning and repair procedures.
- DO NOT flambé or leave naked flames under the cooker hood.
- Keep ventilation slots clear of obstructions as this may cause premature failure of the appliance.
- Do not trap the mains cable and do not route it over surfaces which may become hot. The cable insulation may melt and cause a fire as a result of a short circuit.

- Do not leave frying pans unattended. They may overheat and catch fire.
- Always put lids on pots and pans when using a gas cooker.
- Make sure that the appliance function buttons are switched OFF after every use.



Take care: Accessible parts may become hot during cooking. Be careful.



There is a risk of fire if the appliance is not cleaned properly. Clean the appliance regularly. See Care and Maintenance on page 10.



Safety when working with electricity

- In case of any damage, switch off the product and disconnect it from the mains. To do this, turn off the fuse at the fuse box.



Electrical connection



The installer must follow the instructions and observe the technical data in the Installation Instructions booklet.

This product must be installed by a qualified person in accordance with the regulations in force, otherwise, the guarantee may become void.



Before installing the appliance, it must be checked for any visible damage.

Do not install or use if damaged.

- Before connecting the machine, the installer must ensure that the information on the data plate (fuse rating, voltage and frequency) matches the mains electricity supply. If in any doubt, consult a qualified electrician. The fuse rating can be found on page 14.
- Safety of this appliance can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt, please have the wiring system of the building tested by a qualified electrician.



LAMONA cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).



Do not connect this cooker hood to the mains electricity supply through...

- a multi-socket adapter,
- an extension lead or similar;
- a timing device.
- The electrical connection must comply with current local and national safety regulations (BS 7671 in the UK).
- The appliance must be connected to fixed wiring via the use of a double pole switched fuse outlet with at least 3mm contact separation. The isolation switch must be accessible after installation.
- Reliable and safe operation of this appliance can only be assured if it has been connected to the mains electricity supply.
- The appliance must not be used with energy-saving plug devices. The appliance will not function correctly and may overheat.
- If the mains cable needs to be replaced, this must be done by a suitably qualified person.



The electrical socket must be easily accessible after installation so that the machine can be disconnected from the electricity supply if necessary.

Repair procedures must always be performed by qualified service agents. The manufacturer shall not be held responsible for damages arising from procedures carried out by unauthorised persons. **This may void the guarantee.**

- Check that the appliance is working correctly.

Faulty components must only be replaced by genuine original LAMONA spare parts. Only when these parts are fitted can LAMONA guarantee the safety standards of the machine.




Danger of toxic fumes

Care should be taken when using the cooker hood in the same room or same area of the house at the same time as another heating appliance that depends on the air from the room.

- If there is insufficient air, an under pressure will occur. The heating appliance may be starved of oxygen. This impairs combustion. Harmful gases could be drawn back into the room.
- Sufficient ventilation must be maintained by air inlets which must not be blocked, e.g. in windows, doors and outside wall vents.


If the cooker hood is being operated in recirculation mode, whereby the air is redirected into the room, the above restrictions do not apply.

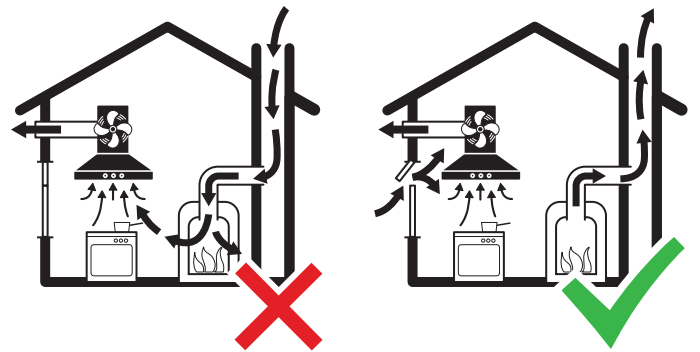


DO NOT operate the appliance with the cooker hood door open.

LAM2709 / LAM2710 Touch Control Black Angled Cooker Hood

Overview

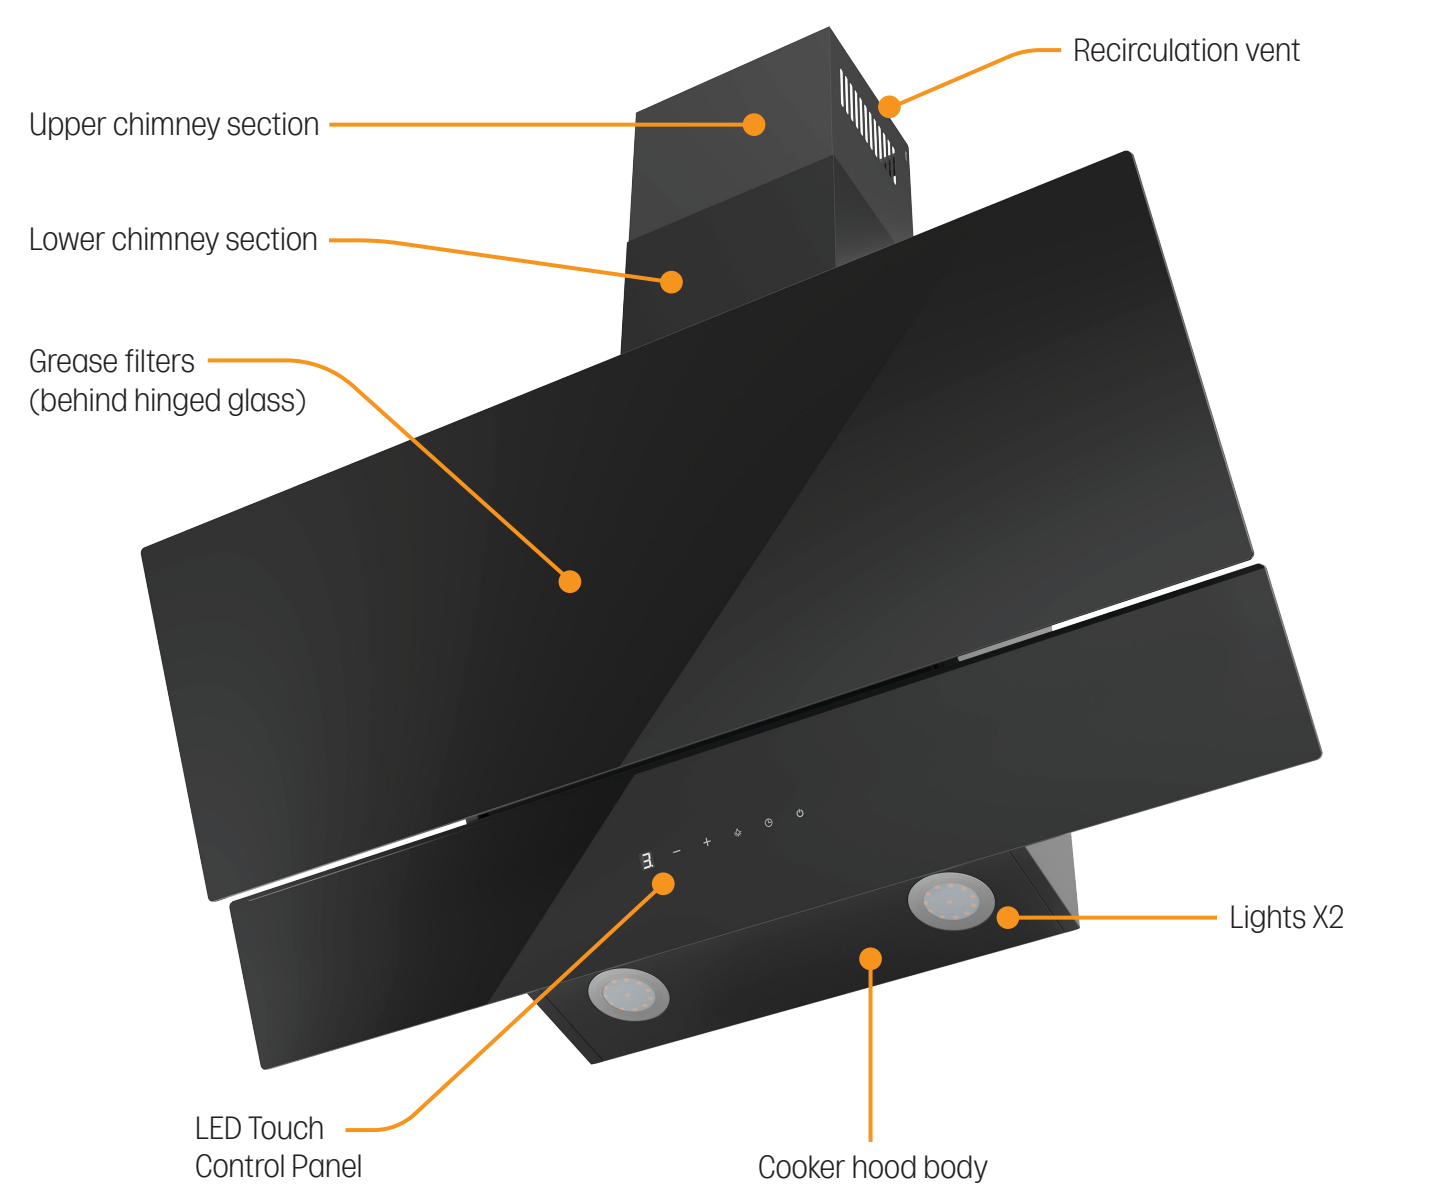

LED Touch Control Panel

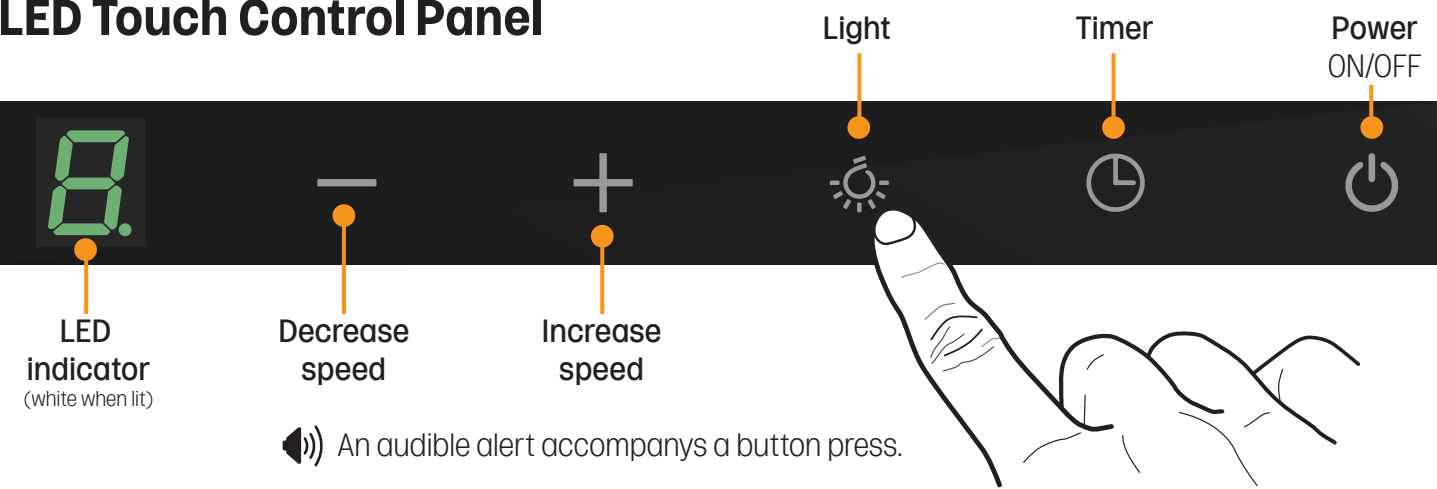

Before using for the first time



Please read this booklet thoroughly before using the appliance.

- Make sure that you have removed all packaging, wrappings, stickers and films from the cooker hood.
- It is recommended that you clean the cooker hood's surface before using it for the first time.

Metal surfaces and condensation

When cooking with pans using a large water content; large quantities of vapour and steam can be produced very quickly. This steam may condense onto the cold metallic surfaces of the cooker hood and even the splash back area if tiled / glazed etc. **This is not a fault with either the hob or cooker hood if correctly installed.**

The amount of this condensation on any particular surface will depend on many factors including:

- The ambient temperature in the kitchen.
- Related ambient temperature of metal surfaces.
- General ventilation within the kitchen.
- The type of food being cooked.
- Duration of cooking.



Using lids on pans can help reduce the amount of steam being released and subsequent condensation.

Operating your cooker hood

After connection to the mains supply, the indicators of all buttons will turn on. The the LED display will then go off and the appliance goes into standby mode.

Turn ON

Press to turn on. The indicator 'lights' to show the appliance is ON.

The cooker hood will start to operate at low speed, the LED will show..... The cooker hood lights will illuminate.


Turn OFF

Press to turn the cooker hood OFF. All functions stop, the lights go out and the appliance enters standby mode.

You can use the power button at any time. Every cooker hood function will stop.



These buttons can be operated without having to press the ON/OFF button. The cooker hood will operate at that function status, excluding the Timer function.

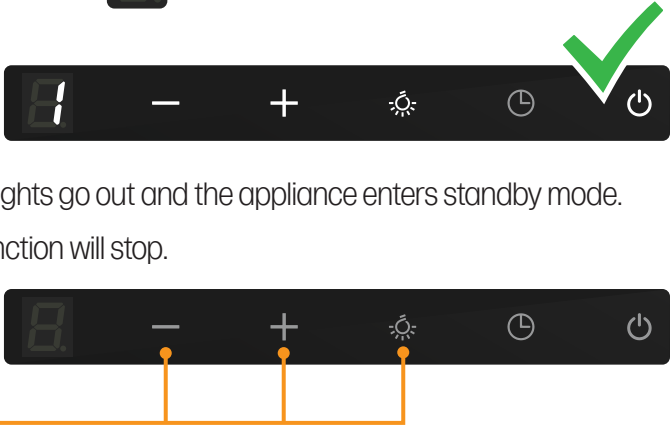

Built-in LED lighting

This appliance is equipped with two LED lights. These can be switched on or off at any time.

Turn the lights ON

Press  to turn the cooker hood lights ON. The LED lights will switch ON and the light button will illuminate. The light button and power button will illuminate.  

Turn the lights OFF

Press  again to turn the cooker hood lights OFF. The LED lights switch OFF and both light and power buttons go out.  

Setting extraction speed

Your Lamona cooker hood can operate at any one of 3 extraction speeds. Use the increase and decrease buttons to select the desired speed.

To increase speed

- Pressing**  once (if lit or not) will set the fan speed to  **Slow speed**
- Pressing**  again will set the fan speed to.....  **Middle speed**
- Pressing**  again will set the fan speed to.....  **High speed**

Once the speed is set to the maximum (3), it cannot be increased any further.

To decrease speed

In this example the operating speed has already been set to 3 (high speed).

- Pressing**  once will reduce fan speed to.....  **Middle speed**
- Pressing**  again will set the fan speed to.....  **Low speed**
- Pressing**  again will set the fan speed to OFF.....  **OFF**

The cooker hood will turn off and all lights and indications will go out.

Timer Function

The timer function can be used to switch OFF your cooker hood after 5 minutes.

This is useful if you have finished cooking and do not want to wait for a few minutes to switch the cooker hood off. Instead you can press the Timer button and it will turn off automatically after 5 minutes.



To use the Timer function, the appliance must be turned on and running.

Pressing  once will cause the button to illuminate 

- The appliance will run for 5 minutes before automatically switching off.
- If you press  again, it will restart the 5 minute duration, this can be done as any times as required.
- After the 5 minute duration expires, the appliance will switch off. All lights and indicators will go out.



If you adjust the cooker hood speed while the Timer function is activated, the Timer function will be cancelled.

Care and maintenance



Before cleaning or attempting any type of maintenance, always make sure that the electricity supply is disconnected.



To avoid the possibility of fire, adhere strictly to all of the recommendations included in this booklet, paying particular attention to the grease filters to ensure grease deposits do not build up.



CAUTION: Accessible parts may become hot when used with cooking appliances.
The appliance should be cold before cleaning.



If the power cable is cut or damaged in any way, disconnect the cooker hood from the electricity supply and call the service number at the rear of this booklet or a suitably qualified repairer.

The manufacturer declines all liability in cases where the instructions for the appropriate installation, maintenance and use of the cooker hood are not observed.

Cleaning method

External surfaces of your appliance are susceptible to scratches and abrasions. Please follow these instructions carefully to avoid damaging your appliance.


General cleaning

- Wipe the external surfaces of the appliance regularly using warm water and a mild detergent.
- NEVER use abrasive cleaners, or strong household cleaners as they may affect the appearance of the product and / or artwork on the control panel, this may void the manufacturer's warranty.
- Avoid leaving alkaline or acid substances (lemon juice, vinegar etc.) on the surfaces.



Touch Control

- The touch control can be cleaned using warm soapy water. Ensure the cloth is clean and well wrung before cleaning. Afterwards, use a dry cloth to remove excess moisture.

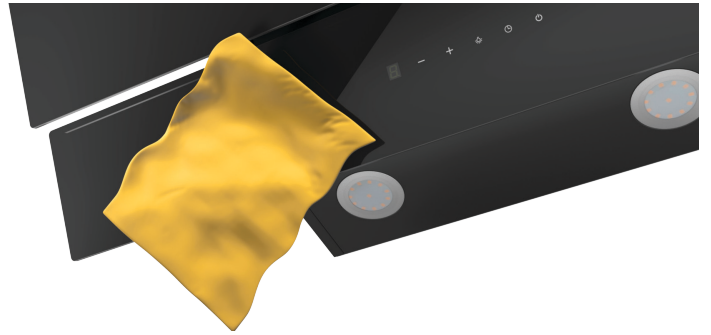


Stainless steel surfaces


- Any stainless steel must be cleaned regularly to ensure long life. Dry with a clean soft cloth. Specialised stainless steel cleaning fluid may be used.
- Ensure that wiping is done along the grain of the stainless steel to prevent any unsightly criss-cross patterns appearing on the surface.

Removing, cleaning and installing the grease filter


- The grease filter should be cleaned by hand every three months or sooner depending on the type of cooking being performed.
- The grease filter is a metallic material and should be washed regularly using a neutral, mild detergent. If necessary use a soft brush. Do not apply too much pressure as this could damage the filter. Leave the filter to dry naturally, but not in direct sunlight.
- The grease filters should be washed separately to crockery and kitchen utensils.
- Make sure the filter is thoroughly dry before reinstalling.

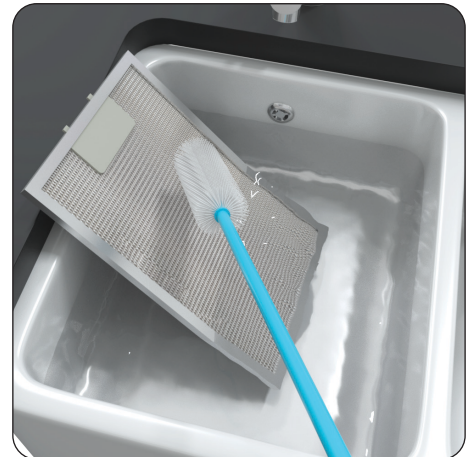


To removing the grease filter

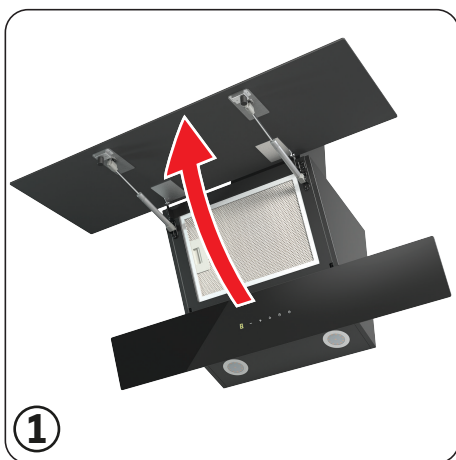

Open cover

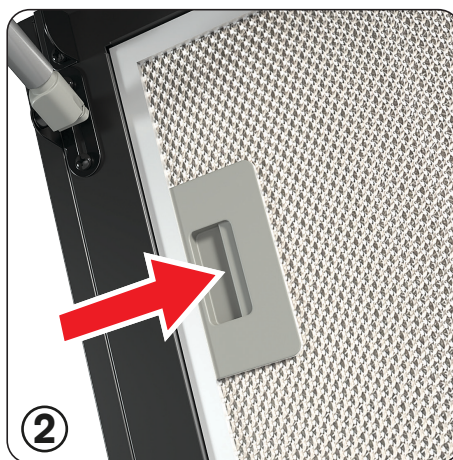

Release latch to unlock

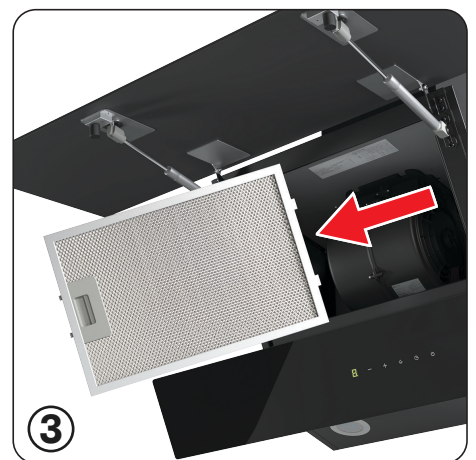

Remove grease filter



Install by reversing the process.

*Illustration shows a generic installation. Actual components may vary in appearance..

Replacing the carbon filters - supplied separately

- 

Carbon filters are only required when appliance is installed in recirculation mode.
- 

Before attempting to change or fit carbon filters, ensure power to the cooker hood is switched off.




- Carbon filters have a limited life. We advise changing them when there is a noticeable drop in performance. The intervals between changing the filters will depend entirely upon the amount of cooking done, but on average a carbon filter will last about 3 months.
- Replacement carbon filters may be purchased from your local Howdens depot or online. Part No: **LAM2010**


To gain access to the carbon filters, first remove the grease filter:

- 

The carbon filter does not fit to the outlet on top of the product!

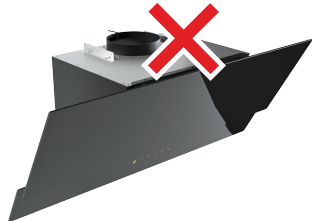

- Remove the old carbon filters by rotating the filter (1).
- Install by reversing the process.
Refit the grease filter, then reconnect the power supply.

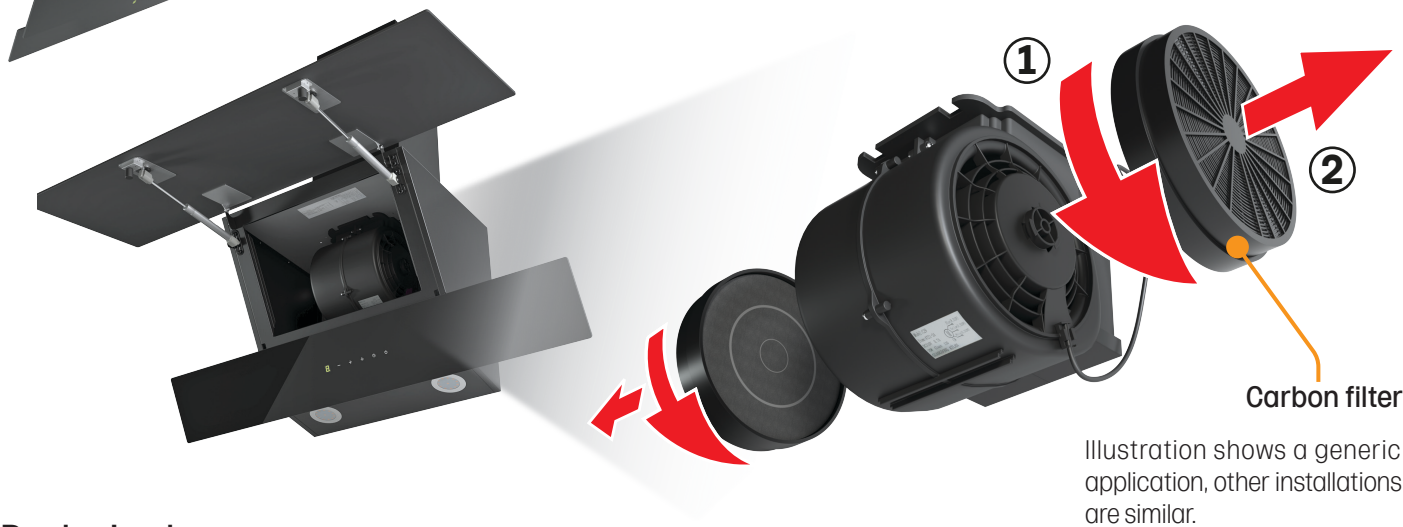

Replacing lamps

The lamps on this appliance are **service fix only** and replacement should be carried out by an authorised service agent. The cooker hood is fitted with LED lamps which will give many years of reliable service. In the event of the lamp(s) failing, please call the service number.

The lamps on this appliance should only be used during operation of the cooker hood. They should not be left on permanently and used as a main lighting source. The cooker hood is for domestic use only.



Only use replacement lamps of this type	LED	  ↔ 
	Round lamp 2 x 1.5W (DSR-1.5/65-S-64)	
	Voltage Range: DC 12V	



Trouble shooting

What might be the cause of...?

Before calling for advice please use this checklist. If the problem persists after completing these checks, please call the LAMONA Service Line.

PROBLEM SOLVING		
Symptoms	Possible cause	Solutions
Lights are on but the fan does not work.	• Fan speed is turned off	• Select a fan speed between 1 and 3.
	• Fan switch failed.	• Call the Lamona Service Line.
	• Motor failure	• Call the Lamona Service Line.
Lighting and motor does not work.	• House fusing blown.	• Reset / Replace fuses.
	• Mains power cable is loose or is disconnected.	• Refit mains power cable to power outlet. Switch power outlet ON.
Oil leakage.	• One way valve and the outlet are not tightly sealed.	• Clean the grease filters with warm water and mild detergent.
	• Leakage from the connection of chimney and cover.	• Take chimney down and seal.
Lights are not working.	• Failed/ faulty lamps / Power cut (hood not functioning).	• Call the Lamona Service Line.
Insufficient Suction	• The distance between the cooker hood and the Gas hob is too far. / Clogged carbon or grease filters.	• Refit the hood to the correct distance / ensure filters are clean.
The cooker hood is noisy.	• Incorrect sized ducting has been installed.	• Install the correct size ducting.
	• Ducting and / or outlet is blocked or restricted.	• Ensure ducting and outlet are free from obstruction.
	• Minimum number of 90° ducting bends has been exceeded during installation.	• Check that the installation does not exceed the minimum recommended number of 90° bends.
	• The hood is not secured to the wall correctly in accordance with the installation instructions.	• Check that the hood is installed correctly to the wall.
	• A cable or building material has fallen into the fan area.	• Check the fan area is clear of any cabling and debris.
	• (In recirculation mode): The flue vents / grilles are obstructed.	• Check that the flue vents / grilles are not obstructed.
	• The cooker hood cabinet does not have a hole for air to escape.	• For canopy cooker hoods, make sure there is a hole in the cabinet for the air to escape and that there is no shelf directly above the outlet.
Poor extraction.	• Installation is using the wrong sized ducting.	• Check that the cooker hood is using the correct size ducting.
	• The ducting and / or outlet is restricted or obstructed.	• Check there are no restrictions within ducting or outlet.
	• Minimum number of 90° ducting bends has been exceeded during installation.	• Check that the installation does not exceed the minimum recommended number of 90° bends.
	• The installed ducting exceeds the recommended run length.	• Check that the installed ducting does not exceed the recommended run length for the model installed.
	• The hood is not being switched on 10 minutes before and after cooking.	• Ensure the cooker hood is switched on 10 minutes before and after cooking.
Condensation is collecting on the hood surfaces.	• Cooking with pans using a large amount of water, can quickly create vapour and steam. This can collect onto the cold metallic surfaces of the appliance and possibly the splash back if tiled or glazed etc. (This is not a fault with the hood or cooker if correctly installed).	• Increase the ambient temperature of the kitchen. • Check there is adequate ventilation. • Reduce the duration of cooking if possible. • Simmer once boil is achieved. Use lids on pans to reduce steam being released reducing subsequent condensation.

If you cannot solve the problem after following this checklist, consult your local Howdens dealer or an authorised service agent. Never try to repair a non functional product yourself.

Technical specifications

LAM2709 / LAM2710: Black Tempered Glass Angled Cooker Hood	
General	
Total Input Power	LAM2709: 78W LAM2710: 78W
Fuse	3 A
Supply Voltage	220V – 240V
Mains Lead Length and Type	1.5m / 3 Core power cord without plug
Speeds	3
Lamps	2 x 1.5 W LED 6500 K
Lighting Efficiency Class	A
Carbon Filter (not supplied)	LAM2010
Grease Filter	1 Aluminium filter (5 layers)
Air Outlet Diameter	150mm
Air Outlet Cable Grid	Included

LAM2709 Dimensions						
Item	Height	Width	Depth	Chimney Heights	Minimum	Maximum
Extractor Body (mm)	370	600	375	Overall Body Height	770mm	1150mm
Top Chimney Piece (mm)	400	222	172	Ceiling Height	N/A	N/A
Lower Chimney Piece	400	222	172	Height from hob	650mm	750mm

LAM2710 Dimensions						
Item	Height	Width	Depth	Chimney Heights	Minimum	Maximum
Extractor Body (mm)	370	900	375	Overall Body Height	770mm	1150mm
Top Chimney Piece (mm)	400	222	172	Ceiling Height	N/A	N/A
Lower Chimney Piece	400	222	172	Height from hob	650mm	750mm

Declaration of conformity

We declare that our products meet the applicable European Directives, Decisions and Regulations and the requirements listed in the standards referenced.

EC Regulation 1275/2008 for standby

Service and repairs

If you have a problem that you cannot resolve after reading this booklet, call the LAMONA Service Line. See page 16, "Guarantee".

- For service and repairs, call the LAMONA Service Line.
- Always use genuine spares, available direct from www.lamonaspares.co.uk.
- To ensure the continued safe and efficient operation of the appliance we recommend that any servicing, repairs or interventions are only carried out by an authorised LAMONA service engineer.

You may be charged for a service call if a problem with your machine is caused by incorrect installation.

- The manufacturer declines all responsibility in the event of any printing mistakes in this booklet.
- The manufacturer also reserves the right to make appropriate modifications to its products without changing the essential characteristics.

Caring for the environment

Reducing energy use during cooking

- Install the cooker hood in a place where there is plenty of ventilation.
- Clean the cooker hood regularly so as not to block the airways.
- Remember to switch off the appliance after cooking.
- Remember to switch off the cooker hood lights after cooking is finished.

Disposal of the packing material

 The environmentally friendly, recyclable packaging is designed to protect the appliance from damage during transportation. All packaging materials should be recycled. Recycling reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Packaging may consists of:
Cardboard, paper, polythene foil (PE), CFC-free polystyrene (PS / foam) & polypropylene tape(PP).

Disposing of your old appliance

- To ensure safe disposal, disconnect the mains plug from the socket. Cut the mains power cable and destroy it.

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety.

These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. **Please do not, therefore, dispose of your old appliance with your household waste.**

 Disposing of the device incorrectly could cause fires or poisoning.

 This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).

- WEEE contains both polluting substances (which can cause negative consequences for the environment) and basic components (which can be reused).
- It is important to have WEEE subjected to specific treatments in order to remove and dispose properly all pollutants and recover and recycle all materials.

Please dispose of at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer for advice.

Guarantee

Product Guarantee Details (UK & Republic of Ireland only).

Your appliance has the benefit of a comprehensive manufacturer's guarantee which covers the cost of breakdown repairs. (Details of which are shown on your Proof of Purchase Document).

- Any claim during the period of the guarantee MUST BE ACCOMPANIED BY THE PROOF OF PURCHASE.
- The product must be correctly installed and operated in accordance with the manufacturer's instructions and used for normal domestic purposes.
- This guarantee does not cover accidental damage, misuse or alterations which are likely to affect the product.
- The guarantee is invalid if the product is tampered with, or repaired by any unauthorised person. (The guarantee in no way affects your statutory or legal right).

What to do if you need to report a problem.

- Please ensure you have ready:
- The product's model and serial numbers.
- Howdens Proof of Purchase Document.
- Your full contact details.

Call the Depot number on your Proof of Purchase Document supplied with the product/kitchen.

or

Call the LAMONA Service Line on:

Within UK 0344 460 0006

Within Republic of Ireland 01525 5703

* Product installed within a domestic kitchen or a non-domestic kitchen where 8 or fewer people are using the appliance.

Spare parts availability - 10 years

Only fit Genuine Spare Parts

www.lamonaspares.co.uk (UK only)

Where to find the model and serial number on the cooker hood.	Inside the body of the cooker hood.
---	-------------------------------------

Notes

Notes

Notes

Product serial number
(Place sticker here)

LAMONA



Product information correct at the time of publication in April 2024.
The company has a policy of continuous product development and reserves the right to change any products and specifications given in this manual. Subject to the Terms and Conditions of Trading, a copy of the Howdens Terms and Conditions is available upon request.
Copyright © 2024 Howden Joinery Ltd. All rights reserved.

Howden Joinery Ltd.
Thorpe Road, Howden, East Yorkshire. DN14 7PA England
Howdens Cuisines SAS. Z.A. du Bois Rigault Nord,
1 Rue Calmette, 62880 Vendin-le-Vieil, Cedex, France